

## Installation and Operational Guide


**Please read** the manual below for important information on your Viviox product that could prevent damage or serious injury. Failure to follow our instructions and other safety precautions could result in serious injury to you or your passengers, and/or product and vehicle damage.

**Important:** The installation technician and operator must read this manual before starting installation or operation of your new product. They must have a thorough understanding of automotive systems, electronics and procedures.

**WARNING:** Please understand that the user and installer assume ultimate, complete and full responsibility in determining proper mounting location and positioning. When installing, consider a location based on its ability to provide total safety to all passengers.

**WARNING:** DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT! All customer-supplied wires that connect with the positive (+) end of the battery must be able to support 125% or more of the maximum operating current. They MUST be fused with the battery to handle the current.

- Before drilling and installation, check both sides of your mounting service.
- Grommets should be installed into all wire passage holes.
- Please read your vehicle's owner's manual; it contains important information about the airbag deployment area. This product should NOT, under any circumstances, be installed in the deployment area of the vehicle's airbag. Do NOT route any wires in this area. Having equipment mounted or located in this area is a serious risk; it could reduce or damage the airbag's effectiveness, or even become a projectile that could result in serious injury or death.
- This device may feature powerful, bright, high-intensity LED lights. DO NOT look at the lights directly, as momentary blindness and/or permanent eye damage can occur.
- DO NOT try to activate or control this product during a hazardous or dangerous driving situation.
- If your device is controlled or activated by a remote, please double check that the control is in a place that will allow for both the control itself, as well as the vehicle, to be used safely in any driving condition and/or situation.

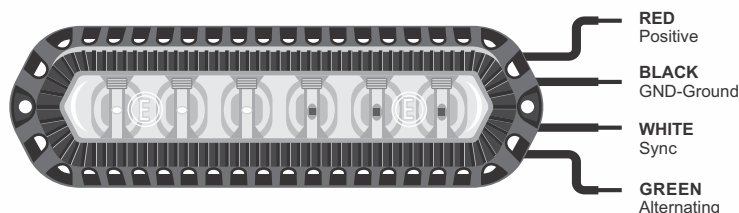

## OPERATION (See Diagram Above)

1. **Changing Patterns:** Apply power to the white wire for

Less than a second	Next Pattern
1-3 Seconds	Previous Pattern
3-5 Seconds	Factory Default
5+ Seconds	Turn off and Reset

**Syncing Instructions:** Configure all light heads to the same pattern and connect the white wires from each light head together. Apply power to every other green wire to alternate multiple light heads.

## MOUNTING

### Surface Mounting Instructions

1. Place the unit against the mounting surface.
2. Mark the areas where the mounting holes are to be drilled. Confirm that no vehicle parts could be damaged by the drilling process.
3. Drill two mounting holes and a 0.4" dia, using a bit that is sized for a #6 sheet metal screw.  
Wire passage hole(s) must also be drilled.
4. Route the wires through the hole(s) in the gasket and through the wire passage hole(s) in the mounting surface. Secure the light head to the mounting surface.

sage hole if needed.

3. Secure the light head to the bracket with the supplied hardware.

## SPECIFICATIONS

### WITH FLANGE

**Dimensions:** 5.5"L 1.125" H 1.125" D

**Input Voltage:** 10-30VDC **Input Current:** 1.4A(MAX)